



NEOFLEX® ROLL INSTALLATION

INSTALLATION MANUAL

Neoflex® Rubber Flooring, supplied in rolls and accessories by Rephouse can be installed on concrete except for limitations noted herein.

NOTE: All Neoflex® rolls and accessories must be stored in a clean, dry place prior to installation.



NOTE: Dimensional tolerance for Neoflex® REPTiles is ± 0.5 mm for thickness and ± 5 mm in rolls width. Colour tone and shading in rolls may vary to the extent that some hand selection is required to maintain uniformity throughout the site.

NOTE: Neoflex® Rubber Flooring is largely manufactured from recycled materials and slight variance in shade and dispersion is normal. It is the installer's responsibility to inspect all products to ensure the correct style, thickness, and colour. Any moderate to severe discrepancies should be reported immediately before beginning installation.

PRE-INSTALLATION

BS 8203:2001 - A1: 2009 *Code of Practice for Installation of Resilient Floor Coverings* should always be read and followed with the addition of these specific instruction below which supersede the standard.

Acclimatize flooring product inside space for 48 hours. This is best done by laying out Neoflex® rolls on the concrete sub-floor in sufficient quantity for a planned installation. Always unroll and install surfaces in the same direction. See diagrams below:

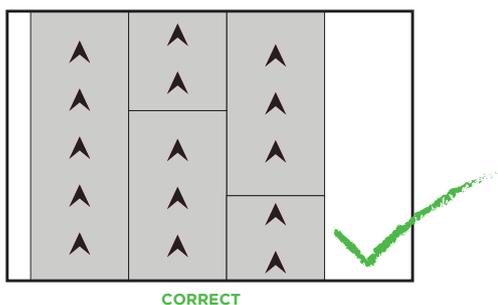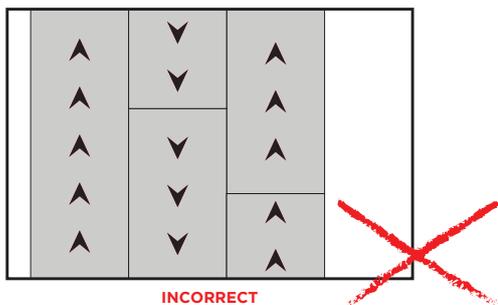

Installation space must be climate-controlled. A stable atmosphere prevents stress to the floorcovering. An ideal atmosphere is ambient temperature between 18°C to 27°C and relative humidity maximum 70%.

The sub-floor temperature is also important and should be at a minimum 15°C and maximum 27°C.

Un-even sub-floor will spoil the appearance of the finished installation as undulations will “telegraph” through the rubber floor and tile corners may not meet. Flatness should not exceed 3 mm in a 3 m circular span. Laying a 3m long aluminium straight edge on the sub-floor and measuring any gaps below the straight edge is best to check flatness. If flatness exceeds specified limits, install a 3 mm thick self levelling cement underlay or grind the sub-floor smooth to within the specified limits.

Cracks and ‘hollow’ areas in sub-floor must be repaired.

The sub-floor must be structurally sound.

Sub-floor needs to be dry. The Neoflex® rolls should not be laid until a hygrometer test is carried out in accordance with BS 8201:1987, A,1, gives a reading of not more than 75% relative humidity.

All contamination should be removed prior to applying floors. Oil is a serious problem that may require the removal of the entire screed.

Sunlight can affect the temperature in a room particularly in conservatories and rooms with south facing windows. In such instances the sunlight needs to be controlled. This can be achieved with temporary blinds or films applied to the glass.

NOTE: Do NOT proceed with installation unless above conditions have been met.

INSTALLATION

NOTE: no warranty, whether expressed or implied, is provided if Rephouse’s recommended adhesive is not used in the installation.

Sweep and/or vacuum area clear of all dust and loose debris.

Determine a starting point for the first course of roll to best suit the site area with minimal wastage.

Neoflex® rolls can be installed using a variety of installation methods. The most common and secure method is full adhesion of rolls and accessories to the substrate using Rephouse’s PU88 Adhesive a 2-part polyurethane adhesive.



FULLY ADHERED INSTALLATION

The rolls, accessories, and substrates must be dry before, during, and 48 hours after the application of adhesive. Application temperatures for PU88 Adhesive is 18°C to 27°C. Higher temperatures and humidity levels will cause the adhesive to set faster and colder temperatures and low humidity will slow down the curing process. The installer should monitor on site conditions and adjust open times accordingly.

Approx coverage rates for the PU88 Adhesive are approximately 0.70 kgs/m² on smooth concrete.

Using a B2-serration notched trowel trowel, apply the PU88 Adhesive consistently and slightly wider than the tile being placed.

Place the rolls into the fresh adhesive bed following pre-established lines and always in the same direction. See diagrams below:

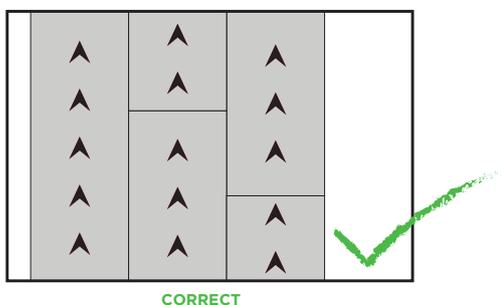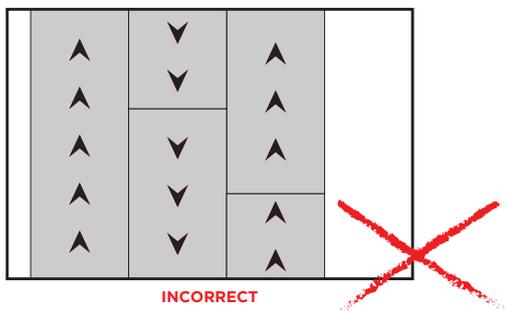

Weight down rubber rolls until adhesive has set – this is best done with 15 kg sand bags or large concrete bricks with a plywood underlay*. Roll the entire surface for \pm 2 hours using a \pm 45 kg hand-held lino-roller until the adhesive has set. This is done to embed the surface into the adhesive and eliminate any entrapped air.

(* concrete bricks should be sealed with plastic bags to avoid concrete dust contamination. It is best to place a 4 mm thick plywood sheet (300 mm wide) below the concrete brick to spread weight).

If applicable, place ramps into the fresh adhesive in a similar manner.

NOTE: make sure that the adhesive bed laid beyond the rolls is not allowed to harden before the next rolls is installed. Failure to follow this instruction may result in unsightly joints that are not level. It is best to feathering finish the adhesive bed laid beyond the rolls using a flat trowel. To avoid this effect in general, we recommend the 'butterfly-method' installation method.

Allow 24 hours for adhesive to cure before opening area for use.

Neoflex® rolls can be field cut. The most accurate cuts are made using a heavy-duty utility knife and a straight edge.

When working beneath a fitness structure, it will be necessary to occasionally notch out portions of rolls so that the rolls will properly fit around the posts supporting the fitness equipment.

Cut the rolls so that the cutout is approximately 5 mm larger in all dimensions than the support it will surround. The extra distance is to prevent binding of the tile around the support. Voids between the equipment supports and roll cuts should be filled in with silicone sealant or a permanently elastic urethane sealant/adhesive.

POST INSTALLATION

Clean and vacuum the completed Neoflex® floor to remove dust and debris.

Clean the Neoflex® floor according to the Neoflex™ Maintenance Instructions.

Protect the completed Neoflex® floor with a breathable, non-staining, untreated building paper until handover to the client.

Do not move heavy and sharp objects directly over surfaces. Place hardboard or plywood panels over flooring and under objects while they are being moved. Slide or roll objects over panels without moving panels.

NOTE: The above data, particularly the recommendations for installation is based on our knowledge and experience. Due to varying conditions during installations, which are beyond our control, Rephouse can not be held liable. Except for a wilful act, any liability based on such recommendations or any oral advice is hereby expressly excluded.

© Rephouse